ASSEMBLY INSTRUCTIONS

THE BRICK BUD

1 Person Assembly

Tools Required

8.1kg
Net Weight

Remember PPE

HARRIS BRICK SAFETY SYSTEMS

+44 (0)7507 256416 sales@harrisbricksafetysystems.com www.harrisbricksafetysystems.com

ASSEMBLY

The Brick Bud

HARRIS BRICK SAFETY SYSTEMS

1

Once you have unpacked your bracing system, insert clamp into the wall. Once through the wall rotate 90 degrees to anchor into place.

2

Safely pick up the Brick Bud and remove the upper locking ball pin allowing the system to unfold.

3

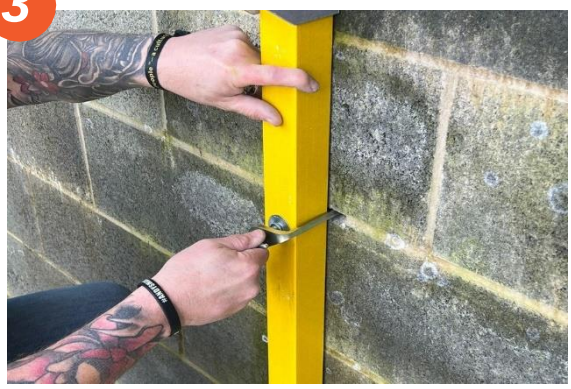

Once the prop is opened, place the vertical face of the Brick Bud against the wall and secure the brace using the clamp.

4

Unfold the top horizontal beam holding into position and insert the locking ball pin securing the system together.

5

Unfold the lower beam and align the holes with the holes from the silver plate. Insert ball pin to complete prop setup.

6

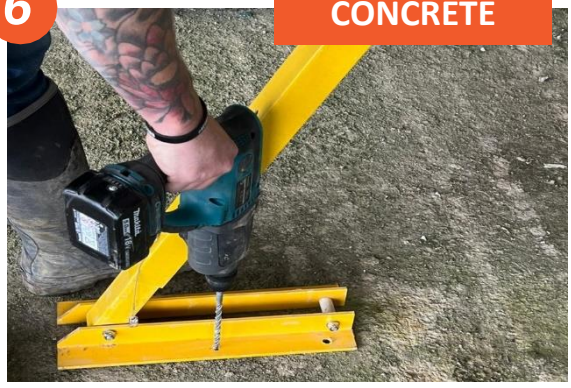

Using a drill and masonry drill bit, drill through pre-drilled holes in the prop base by a minimum of 50mm to ensure a secure fix.

ASSEMBLY
The Brick Bud

HARRIS BRICK SAFETY SYSTEMS

7 CONCRETE

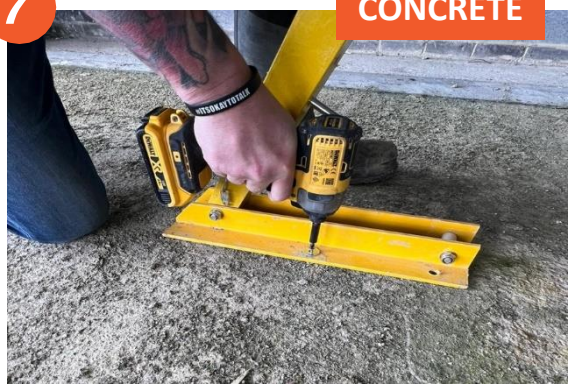

Using washers and Hilti HUS 6x35 (or similar), use your electric screwdriver to tighten the bolts into the drilled holes.

8 SCAFFOLDING BOARD

Securing to scaffolding board? Use 2 x 1 inch wood screws & washers to secure the propping system to the scaffolding board surface.

9 SCAFF MAT

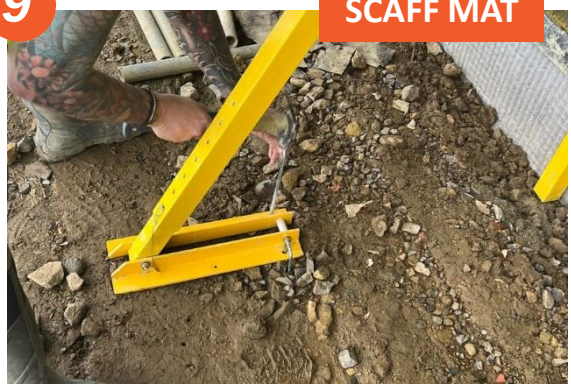

When securing the Brick Bud to a Scaff Mat surface, use 2 x 12mm road pins or 8mm rebar. This will ensure a secure fixing to the Scaff mat.

10

You're all set! Your Brick Bud safety system should now be secured to the new wall and the base safely secured.

Disassembly Instructions

Once your wall is safe and secure, in order to disassemble the prop simply follow the above instructions in reverse order.

1. Remove screws/bolts which are securing the system to the surface
2. Remove locking ball pin joining the horizontal and vertical beams and fold away the short horizontal section.
3. Loosen clamp and free the Brick Bud from the clamp.
4. You will now be able to safely fold away the system and replace the locking ball pin securing the frame together.
5. Remove clamp from the wall and store away safely.

Always remember your personal protective equipment when using any tools. We recommend using gloves and eye wear when using the Brick Bud.